



EUROPRESS



**E**uropress pressure reducing valve is a device which reduces and stabilizes the upstream pressure to an adjusted downstream pressure.

When the entering pressure from the public mains is too high and variable, pressure reducing valve **stabilizes the downstream pressure to the adjusted one**. Possible variations of the upstream pressure do not influence the adjusted downstream pressure. This range of pressure reducing valves allows the operator to adjust the downstream pressure to a set figure.

Pressure reducing valves are **suitable for domestic water services, heating and air-conditioning plants, compressed air systems\***. They can be used **with water, compressed air and no-aggressive fluids**. ITAP Pressure reducing valves comply with the requirements of Council Directive 97/23/EC (PED) and the CE marking is not requested according to art. 3 clause 3 of DL 25/02/2000 n. 93.

(\* In the type-testing according to PED Council Directive, it is necessary that pressure reducing valves were approved as a part of the installation).



143

## EUROPRESS PRESSURE REDUCING VALVE





SIZE	PRESSURE	CODE	PACKING
1/2" (DN 15)	25bar/362,5psi	1430012	1/34
3/4" (DN 20)	25bar/362,5psi	1430034	1/34
1" (DN 25)	25bar/362,5psi	1430100	1/18
1 1/4" (DN 32)	25bar/362,5psi	1430114	1/9
1 1/2" (DN 40)	25bar/362,5psi	1430112	1/9
2" (DN 50)	25bar/362,5psi	1430200	1/8
2 1/2" (DN 65)	25bar/362,5psi	1430212	1/6
3" (DN 80)	25bar/362,5psi	1430300	1/4
4" (DN 100)	25bar/362,5psi	1430400	1/3

### TECHNICAL SPECIFICATIONS


Compensated piston operation.  
 Female/female threads.  
 Body in nickel-plated brass.  
 Minimum and maximum working temperatures: 0°C, 80°C.  
 Maximum inlet pressure: 25bar.  
 Outlet pressure can be adjusted between 1 and 6 bar.  
 Factory preadjustment 3 bar.  
 Outlet pressure gauge connection 1/4" on both sides.  
 Threads ISO228 (equivalent to DIN EN ISO 228 and BS EN ISO 228).  
 Available also with NPT thread in the sizes 2"1/2 - 3" - 4".

### MATERIALS FROM 1/2" TO 1"

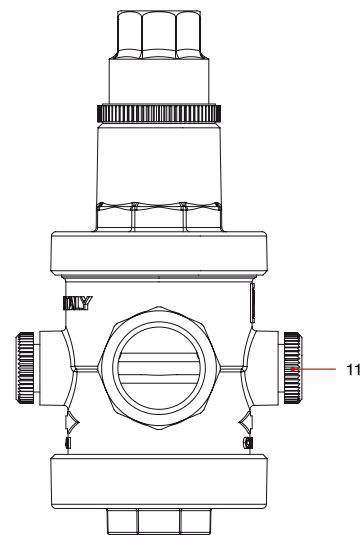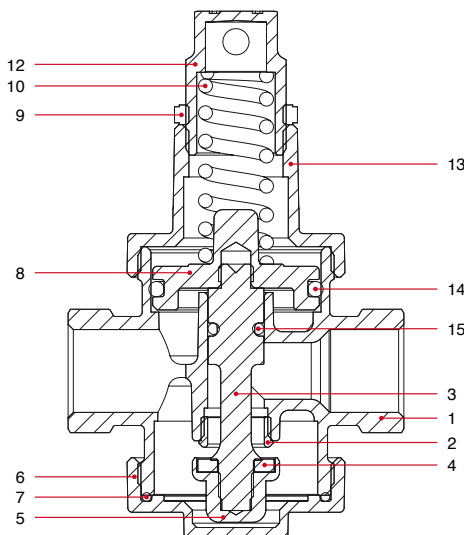

POS.	DESCRIPTION	N.	MATERIAL
1	Body	1	Nickel-plated brass CW617N
2	Seat	1	Stainless steel AISI 303
3	Stem	1	Brass CW614N
4	Flat seat washer	1	NBR
5	Shutter	1	Brass CW614N
6	Bottom plug	1	Nickel-plated brass CW617N
7	O-Ring	1	NBR
8	Diaphragm	1	Brass CW614N
9	Nut	1	Nylon
10	Spring	1	EN 10270-1 SM
11	Cap	2	Nylon
12	Regulator	1	Nickel-plated brass CW617N
13	Upper plug	1	Nickel-plated brass CW617N
14	O-Ring	1	NBR
15	O-Ring	1	NBR

MATERIALS  
FROM 1"1/4 TO 4"

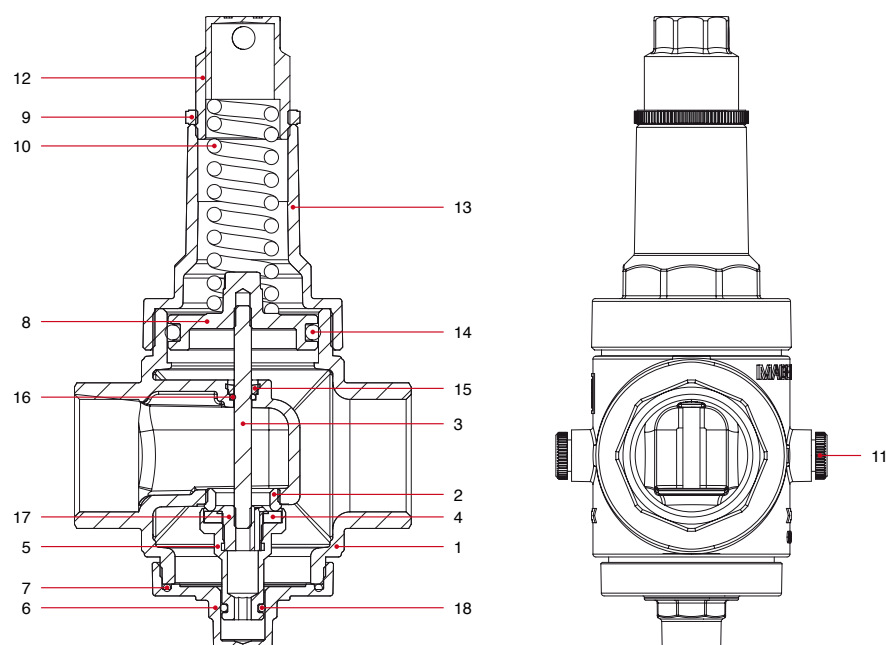


EUROPRESS



POS.	DESCRIPTION	N.	MATERIAL
1	Body	1	Nickel-plated brass CW617N
2	Seat	1	Stainless steel AISI 303
3	Stem	1	Brass CW614N
4	Flat seat washer	1	NBR
5	Shutter	1	Brass CW614N
6	Bottom plug	1	Nickel-plated brass CW617N
7	O-Ring	1	NBR
8	Diaphragm	1	Brass CW614N
9	Nut	1	Nylon
10	Spring	1	EN 10270-1 SM
11	Cap	2	Nylon
12	Regulator	1	Nickel-plated brass CW617N
13	Upper plug	1	Nickel-plated brass CW617N
14	O-Ring	1	NBR
15	Stop ring	1	Brass CW614N
16	O-Ring	1	NBR
17	Stop washer	1	Brass CW614N
18	O-Ring	1	NBR

## OVERALL DIMENSIONS

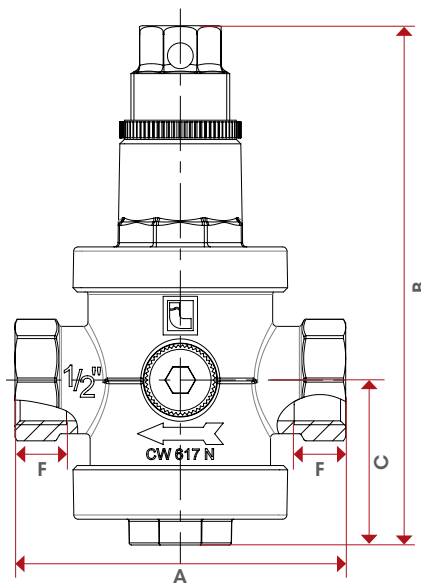

	1/2"	3/4"	1"	1 1/4"	1 1/2"	2"	2 1/2"	3"	4"
DN	15	20	25	32	40	50	65	80	100
A	77	85	91	118	126	142	147	179	188
B	125,5	125,5	159	218	225	250	270	290	330
C	40	40	59	69,5	126	87	88	97,5	104,5
F	12	12	13	18	18	20	20	22	23,5
Kg/cm² bar	25	25	25	25	25	25	25	25	25
LBS - psi	363	363	363	363	363	363	363	363	363

## CERTIFICATIONS



# 143MM

**EUROPRESS**  
PRESSURE REDUCING  
VALVE, WITH UNION  
CONNECTIONS





SIZE	PRESSURE	CODE	PACKING
1/2" (DN 15)	25bar/362,5psi	1430012MM	1/34
3/4" (DN 20)	25bar/362,5psi	1430034MM	1/24
1" (DN 25)	25bar/362,5psi	1430100MM	1/18
1 1/4" (DN 32)	25bar/362,5psi	1430114MM	1/9
1 1/2" (DN 40)	25bar/362,5psi	1430112MM	1/9
2" (DN 50)	25bar/362,5psi	1430200MM	1/6

## TECHNICAL SPECIFICATIONS

Compensated piston operation.  
Union connections.  
Body in nickel-plated brass.  
Minimum and maximum working temperatures: 0°C, 80°C.  
Maximum inlet pressure: 25bar.  
Outlet pressure can be adjusted between 1 and 6 bar.  
Factory preadjustment 3 bar.  
Outlet pressure gauge connection 1/4" on both sides.  
Threads ISO228 (equivalent to DIN EN ISO 228 and BS EN ISO 228).

## MATERIALS FROM 1/2" TO 1"

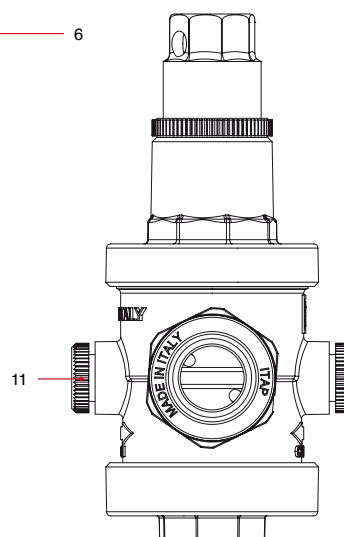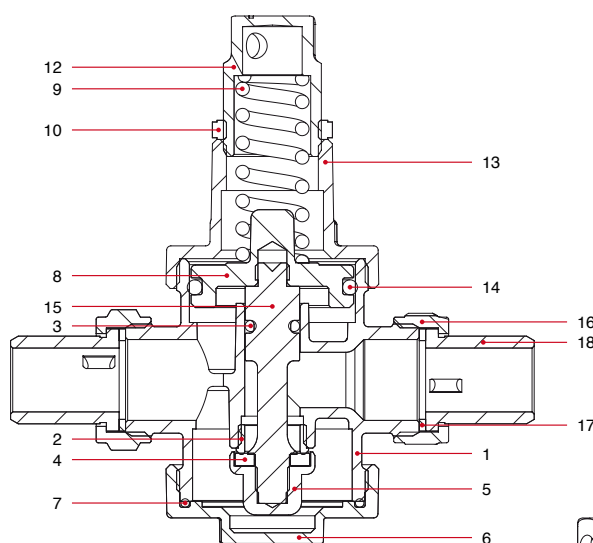


EUROPRESS




MATERIALS  
FROM 1"1/4 TO 2"

POS.	DESCRIPTION	N.	MATERIAL
1	Body	1	Nickel-plated brass CW617N
2	Seat	1	Stainless steel AISI 303
3	Stem	1	Brass CW614N
4	Flat seat washer	1	NBR
5	Shutter	1	Brass CW614N
6	Bottom plug	1	Nickel-plated brass CW617N
7	O-Ring	1	NBR
8	Diaphragm	1	Brass CW617N
9	Nut	1	Nylon
10	Spring	1	EN 10270-1 SM
11	Cap	2	Nylon
12	Regulator	1	Nickel-plated brass CW617N
13	Upper plug	1	Nickel-plated brass CW617N
14	O-Ring	1	NBR
15	O-Ring	1	NBR
16	Nut	2	Nickel-plated brass CW617N
17	Flat seat washer	2	Fiber
18	Fitting with flat seat	2	Nickel-plated brass CW617N

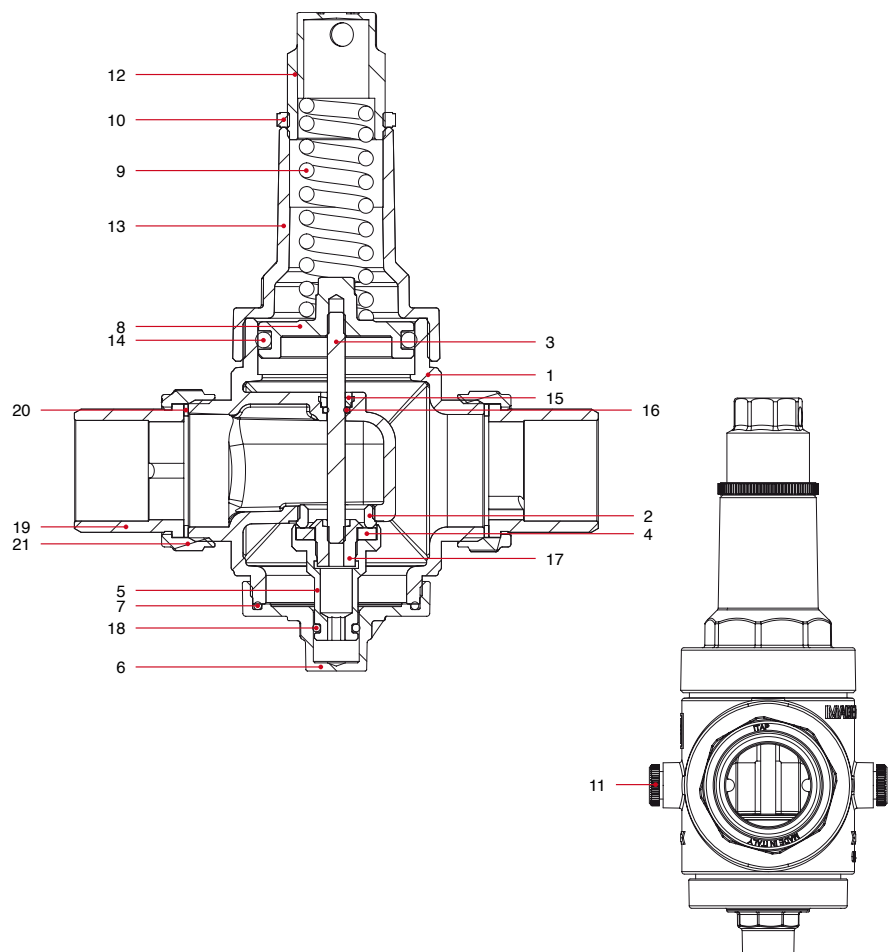

POS.	DESCRIPTION	N.	MATERIAL
1	Body	1	Nickel-plated brass CW617N
2	Seat	1	Stainless steel AISI 303
3	Stem	1	Brass CW614N
4	Flat seat washer	1	NBR
5	Shutter	1	Brass CW614N
6	Bottom plug	1	Nickel-plated brass CW617N
7	O-Ring	1	NBR
8	Diaphragm	1	Brass CW617N
9	Nut	1	Nylon
10	Spring	1	EN 10270-1 SM
11	Cap	2	Nylon
12	Regulator	1	Nickel-plated brass CW617N
13	Upper plug	1	Nickel-plated brass CW617N
14	O-Ring	1	NBR
15	Stop ring	1	Brass CW614N
16	O-Ring	2	NBR
17	Fitting flat seat	2	Brass CW614N
18	O-Ring	2	NBR
19	Fitting with flat seat	2	Nickel-plated brass CW617N
20	Flat seat washer	2	Fiber
21	Nut	2	Nickel-plated brass CW617N

## OVERALL DIMENSIONS

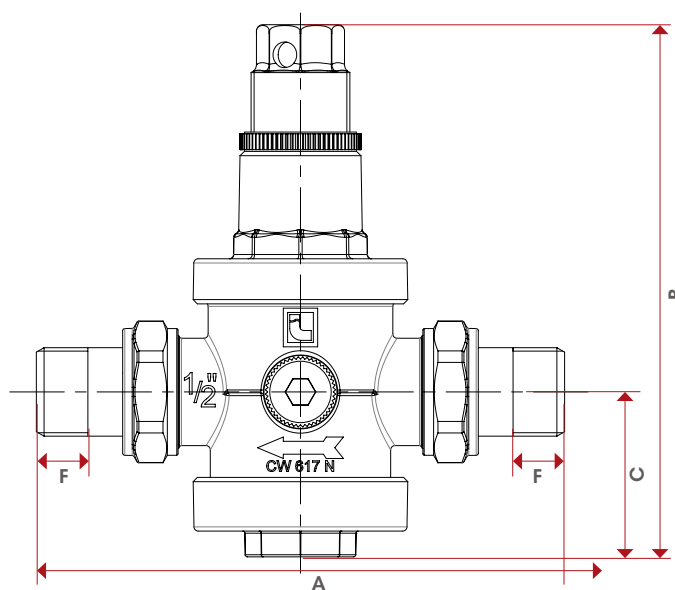

	1/2"	3/4"	1"	1 1/4"	1 1/2"	2"
DN	15	20	25	32	40	50
A	123	135	156	177	188	213
B	125,5	125,5	159	218	225	250
C	40	40	59	69,5	126	87
F	12	12	14	16	16	17
Kg/cm <sup>2</sup> bar	25	25	25	25	25	25
LBS - psi	363	363	363	363	363	363

## CERTIFICATIONS





# PRESSURE DROP CHART

## WITH WATER


Pressure drop diagram includes the loss of pressure proportional to a specific flow rate. According to the requested flow rate, it is possible to measure the water system and the pressure reducing valve correctly (it would be better to have a flow speed between 1 m/s and 2 m/s in the piping).

### INSTANCE:

In case of 1/2" pressure reducing valve with an adjusted downstream pressure of 3 bar and a flow rate of 35 l/min, the pressure drop diagram states a loss of pressure of 0.62 bar. It means that the pressure gauge installed on the outlet way of pressure reducing valve shows a figure of 2.38 bar (= 3 bar - 0.62 bar).

Here mentioned figures refer to: upstream pressure 8 bar, downstream pressure 3 bar.

N.B. Figure about 4" are approximate.

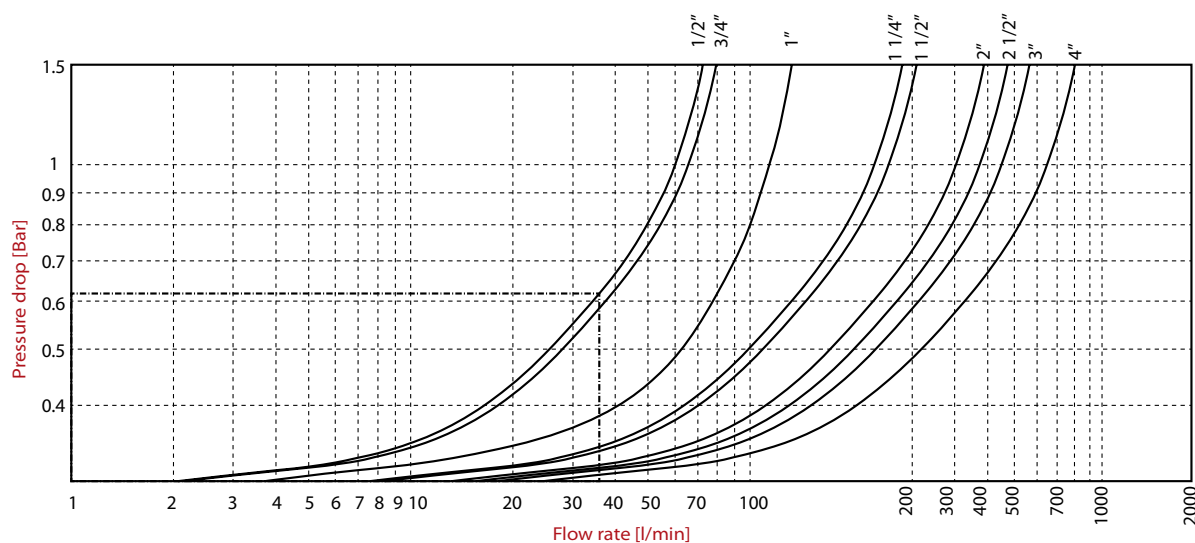



## MANUFACTURER INSTRUCTIONS

### Installation


For the best use and duration of the system, it is necessary to comply with the following instructions on installation, with the national regulations and with relevant local requirements.

- Place of installation has to be protected from frost and has to be easily inspectable
- Install the pressure reducing valve on the private water system, immediately downstream of the water meter
- It would be better to install shut-off valves upstream and downstream of the pressure reducing valve, to facilitate the maintenance operations
- In order to protect pressure reducing valve from overpressure, install a check valve immediately downstream of the pressure reducing valve
- The right scheme of installation is shown in Fig. 5.2
- In case of water heater downstream of the pressure reducing valve, install an expansion vessel between the valve and the water heater
- In order to avoid cavitation and therefore excessive noiseness, it is strongly recommended that the ratio between maximum upstream pressure and regulating downstream pressure does not exceed the value of 2,5.
- Pressure reducing valve is not a safety device. It would be better to install all the necessary safety relief valves.

Please, duly note the downstream pressure of the reducing valve has not to be higher than the maximum working pressure of the devices installed in the private water system, in order to avoid possible damages or malfunctions.

### Instruction on installation

1. Before installing the pressure reducing valve, open all the outlets to flush the system and expel any air left in piping
2. Install shut-off valves upstream and downstream to facilitate maintenance operations
3. For a right flow direction, use the arrow stamped on the body
4. ITAP pressure reducing valve can be installed in either vertical or horizontal piping. It can be installed also upside down
5. Art. 143 is equipped with a threaded connection suitable for a pressure gauge. It is possible to unscrew the plug made by
6. Nylon PA6 in order to install a pressure gauge in the size of 1/4". In such a position, the pressure gauge shows the downstream pressure of the reducing valve. The whole range of ITAP pressure reducing valves are tested and adjusted with a downstream pressure of 3 bar. It is possible to change the downstream pressure by means of the adjusting device.

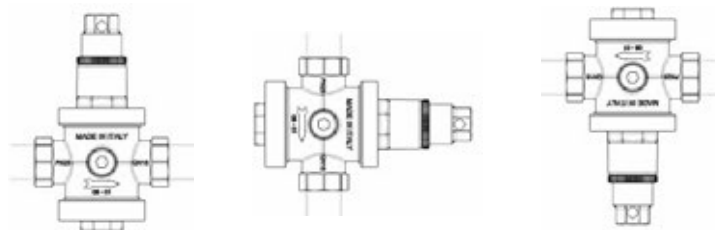

7. The final adjustment of the pressure reducing valve has to be carried out with a filled private water system and with all the outlets shut-off. The upstream pressure has to be at least 1 bar higher than the adjusted pressure. Adjustment of the pressure reducing valve to a downstream pressure different from the pre-adjusted one (3 bar):

- Close the downstream shut-off valve
- Unscrew the nylon nut (Fig. 4.1)
- Adjustment is carried out by means of a tool or a screwdriver on the upper part of the device (Fig. 4.2); turn in clockwise way to increase the downstream pressure, turn in anticlockwise way to reduce the downstream pressure
- Open the outlets in the private water system, in order to check the stability



## MANUFACTURER INSTRUCTIONS

of the adjusted pressure

- Adjust the downstream pressure with outlets totally shut-off and with water at room temperature only
- Screw the nylon nut (Fig. 4.3)
- Adjustment procedure is complete once the required pressure appears on the pressure gauge.



FIG. 4.1

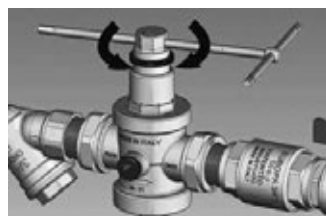


FIG. 4.2



FIG. 4.3

### Troubleshooting

Increase in pressure downstream on the pressure reducing valve with a water heater in-line. This problem is due to heating of the water, caused by the water heater. The pressure downstream increases, due to water expansion, as the pressure reducing valve is correctly closed. It is necessary to install an expansion vessel between the pressure reducing valve and the water heater to absorb the pressure increase (Fig. 5.1).


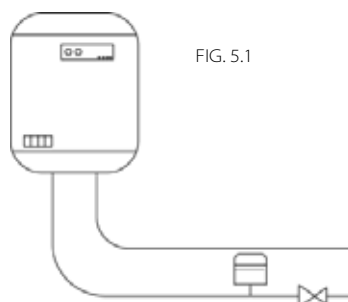


FIG. 5.1

### The pressure reducing valve does not maintain the adjusted figure

In most cases, this problem is due to the presence of impurities on the valve seat, causing blow-by and consequent increase in the downstream pressure. Install an Y-strainer upstream of the pressure reducing valve. Carry-out the maintenance of the Y-strainer. Flush the water system before installing the pressure reducing valve.

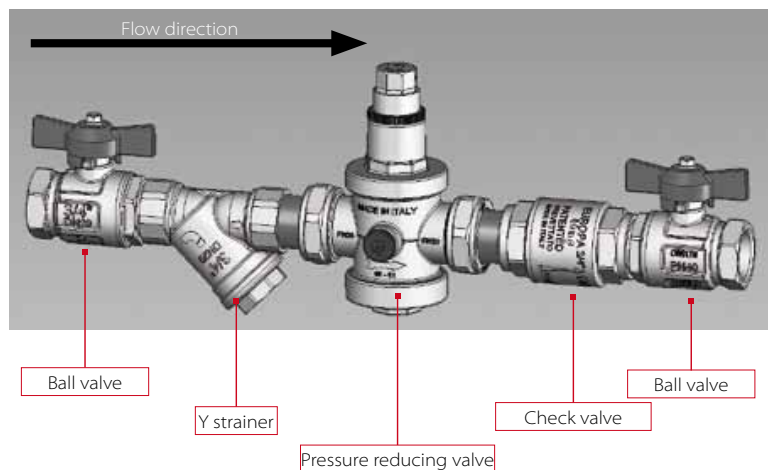

Ball valve

Y strainer

Pressure reducing valve

Check valve

Ball valve